


Installation Instructions – EX® SignalTight™ 6 & 59 series




Cut cable squarely.




Using a fixed blade, prep tool in good condition, prepare cable to 1/4" x 1/4" dimensions. Use edge of tool if no stop

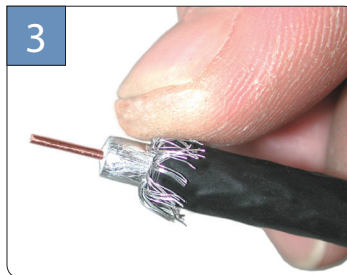

Fold back braid. If Trishield or Quadshield remove additional foil layer and fold back remaining braid.

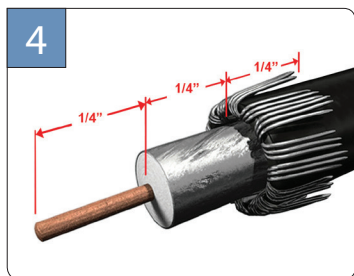


Cable is prepared to proper dimensions.

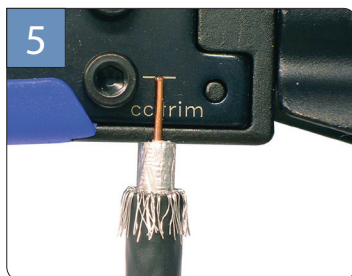


Ensure cable is prepared to 1/4" x 1/4" dimensions. Use gauge on VT tool to recheck center conductor.



Guide center conductor and dielectric into post. Insert cable into connector until dielectric is flush within post.

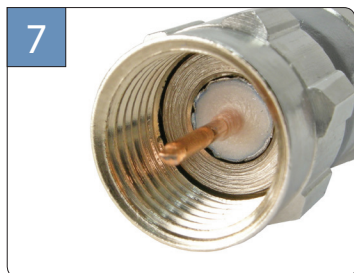

Dielectric is flush within the post.

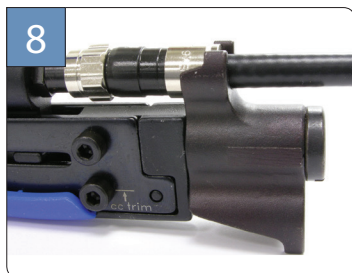

Properly seat connector and compress fully.



Tighten connector to recommended torque.

EX6PLUS



EX6XLPLUS



EX59PLUS



EX59XLPLUS



Part Numbers

- EX6PLUS
- EX6XLPLUS
- EX59PLUS
- EX59XLPLUS

Description

EX® SignalTight™ Series Universal compression connectors for 6 & 59 series cable